

PPB-103/104/106 Series REX Button Instructions

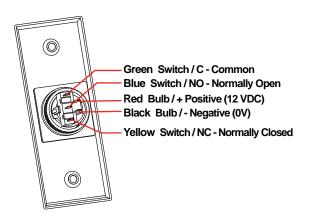



EXIT SORTIA EXIT EXIT


To swap out your lens cover to the other included lens covers, carefully pull on the clear cover only to remove it from the front of the switch.

Pick which cover you want, place it inside and return the cover to its position, and push it in until you hear it snap into place.

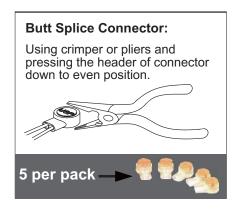

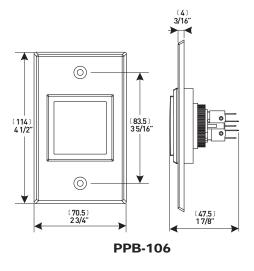


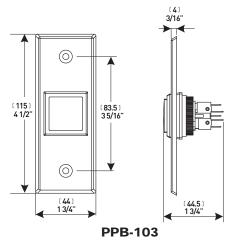

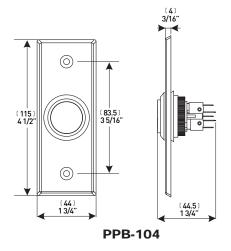

Copyright © All Rights Reserved. P-MU-PPB-10 Published: 2016.12.14

PPB-103/104/106 Series REX Button Instructions

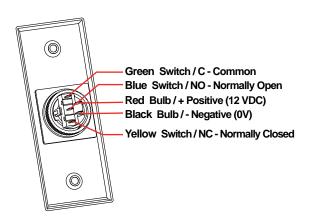



To swap out your lens cover to the other included lens covers, carefully pull on the clear cover only to remove it from the front of the switch.

Pick which cover you want, place it inside and return the cover to its position, and push it in until you hear it snap into place.

Butt Splice Connector: Using crimper or pliers and pressing the header of connector down to even position. 5 per pack

