

PPB-110 Series REX Button Instructions





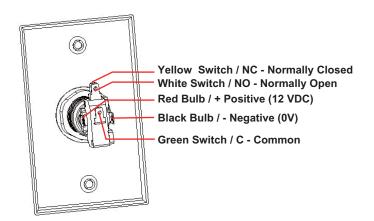

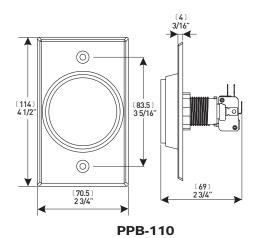





To swap out your lens cover to the other included lens covers, carefully pull on the clear cover only to remove it from the front of the switch.


Pick which cover you want, place it inside and return the cover to its position, and push it in until you hear it snap into place.

Copyright © All Rights Reserved. P-MU-PPB-11 Published: 2016.12.14

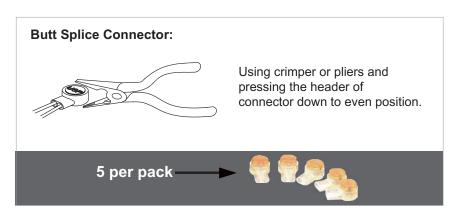

PPB-110 Series REX Button Instructions

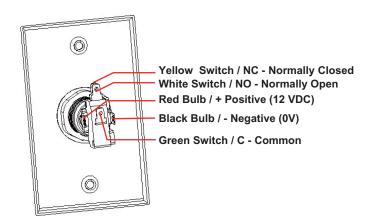

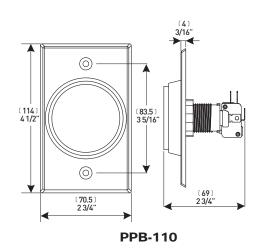







To swap out your lens cover to the other included lens covers, carefully pull on the clear cover only to remove it from the front of the switch.

Pick which cover you want, place it inside and return the cover to its position, and push it in until you hear it snap into place.

